


Hoe zet ik de taal van mijn nieuw Motorola DECT toestel in het Nederlands / Frans / Engels?


1. Druk 1 maal op de "MENU/OK" knop

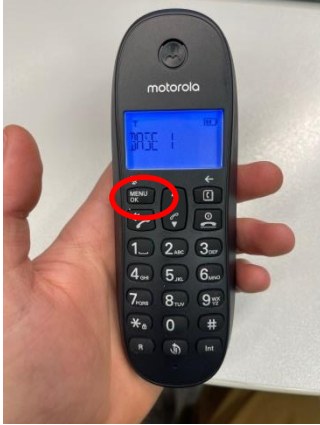

2. Druk 3 maal op de "Omhoog" knop




3. Selecteer "TERMINAL" in het menu door 1x op de "MENU/OK" knop te drukken

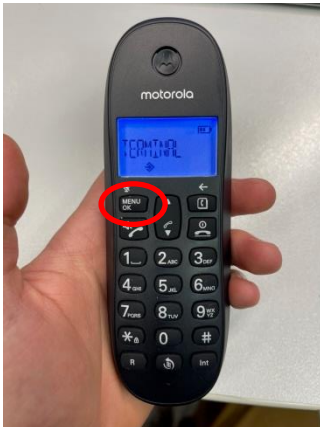

4. Druk 2 maal op de "Omhoog" knop




5. Selecteer "IDIOMA" in het menu door op de "MENU/OK" knop te drukken

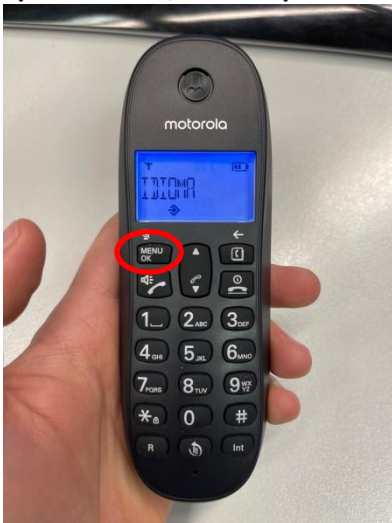


6. Met de pijltjes knoppen scrollt u door het menu van talen.

U bevestigt de taal door op de "MENU/OK" knop te drukken

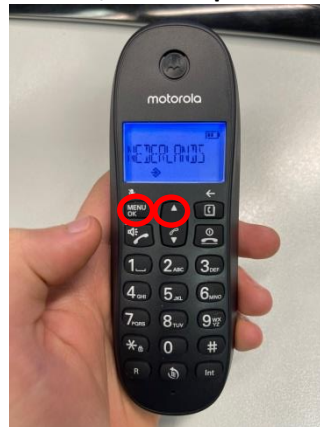

Comment régler la **langue** de mon nouvel appareil Motorola DECT sur **Néerlandais / Français / Anglais** ?


1. Appuyez une fois sur le bouton « MENU/OK »

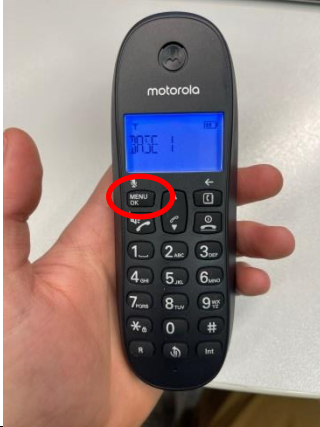


2. Appuyez 3 fois sur le bouton « Up »




3. Sélectionnez « TERMINAL » dans le menu en appuyant 1x sur la touche « MENU/OK »

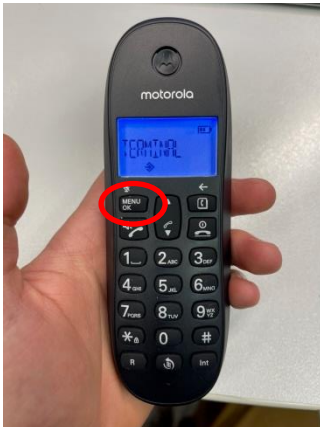


4. Appuyez 2 fois sur le bouton « Up »

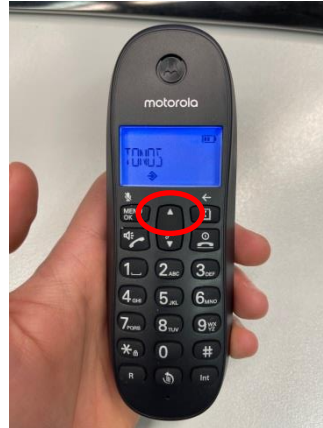

5. Sélectionnez « IDIOMA » dans le menu en appuyant sur la touche « MENU/OK »

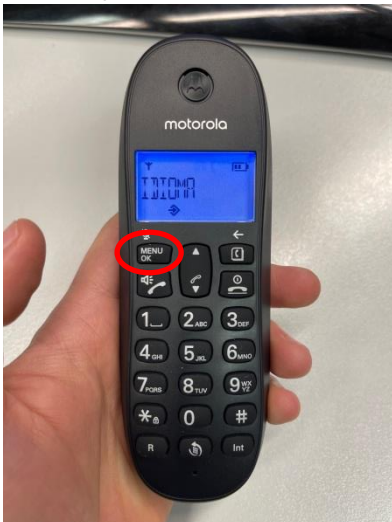


6. Utilisez les boutons fléchés pour faire défiler le menu des langues. Vous confirmez la langue en appuyant sur la touche « MENU/OK »

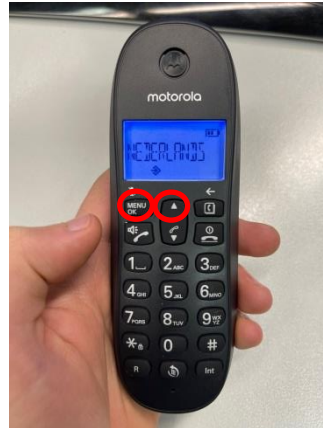

How do I set the **language** of my new Motorola DECT device to **Dutch / French / English**?


1. Press the “MENU/OK” button once

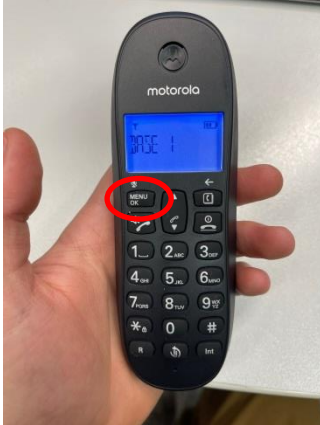

2. Press the “Up” button 3 times



3. Select “TERMINAL” in the menu by pressing the “MENU/OK” button 1x

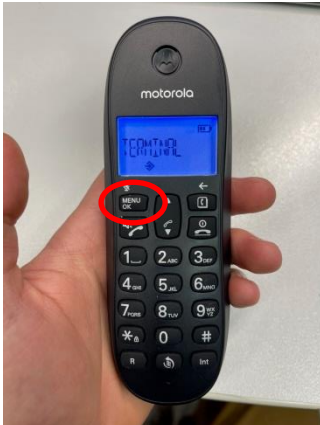

4. Press the “Up” button 2 times



5. Select “IDIOMA” in the menu by pressing the “MENU/OK” button



6. Use the arrow buttons to scroll through the menu of languages.
You confirm the language by pressing the “MENU/OK” button

